

Andúril 2

Factory Reset

Loosen body tube to cut power off, hold switch button, screw body tube tight, keep holding switch for 3 seconds till it flashes.

Version Check


Toggle
Smooth / Stepped Ramp

ON

OFF

Actions
 1C: Click
 1H: Hold
 2C: Click, Click
 2H: Click, Hold
 3C: Click, Click, Click

Factory Defaults
 Default UI: Simple UI
 Default Ceiling Simple UI: 150/150
 Default Ceiling Advanced UI: 120/150

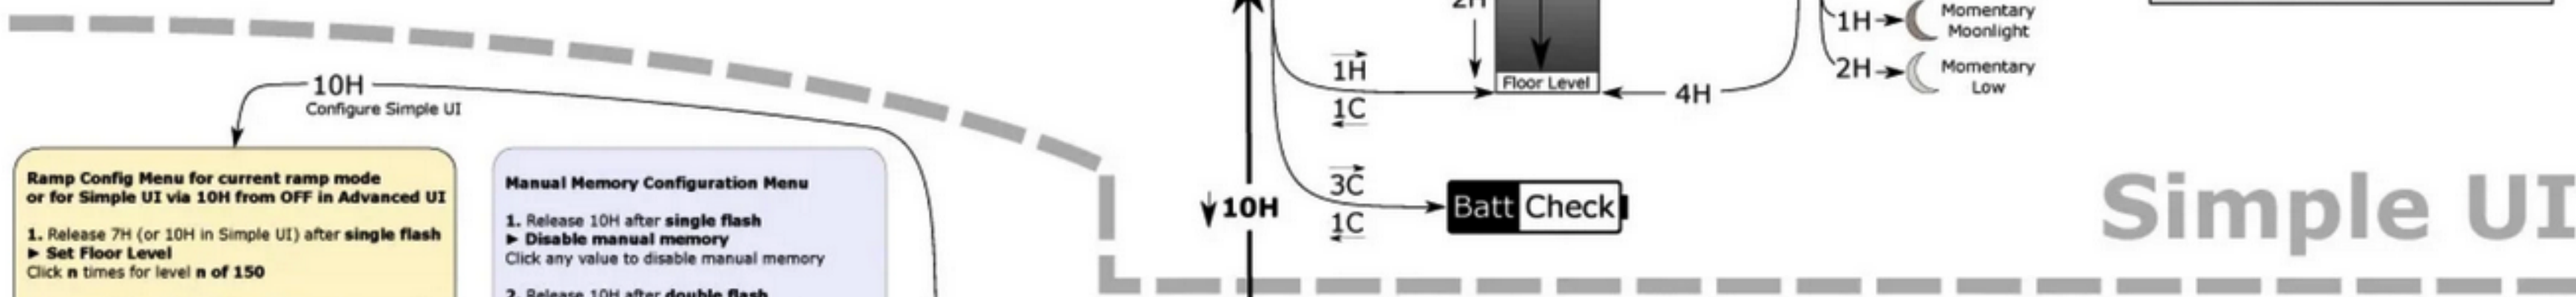

Ramp Config Menu for current ramp mode or for Simple UI via 10H from OFF in Advanced UI

- Release 7H (or 10H in Simple UI) after **single flash**
 ► **Set Floor Level**
 Click n times for level n of 150
- Release 7H (or 10H in Simple UI) after **double flash**
 ► **Set Ceiling Level**
 Click n times for the nth highest level of 150
- Release 7H (or 10H in Simple UI) after **triple flash**
 ► **Set number of steps***
 Click n times for the number of steps

* n/a in Advanced UI Smooth Ramp configuration

Manual Memory Configuration Menu

- Release 10H after **single flash**
 ► **Disable manual memory**
 Click any value to disable manual memory
- Release 10H after **double flash**
 ► **Configure manual memory timer**
 Click n times for n minutes (0 clicks = timer off)

Automatic: last-ramped brightness
 Manual: user's saved brightness
 Hybrid: remember last-ramped brightness for n minutes

Toggle
Smooth / Stepped Ramp

Activate **Manual Memory** & save current brightness

Turns off the light automatically. Keep holding to add 5min increments of runtime to the sunset timer.
 1 blink = 5 minutes

Sunset Mode

Tint Ramp
Toggle CH1 / CH2

Auto ← Auto

Strobe Modes

- Lightning Storm**: 2C
- Candle Mode**: mode memory 3H, 1C
- Tactical Strobe**: 2C
- Party Strobe**: 2C
- Bike Flasher**: 2C

Set Candle Runtime
1 blink = 5 min runtime

Actions:
 1H: brighter/faster (except Lightning Storm)
 2H: dimmer/slower (except Lightning Storm)
 5C: go to Momentary Mode / Strobe

Blinky & Utility Modes

- Auto-Lock**: n clicks = n minutes until locked automatically
- Brightness of AUX/Buttons LEDs in Lockout**: Off - Low - High - Blinking
- Brightness of AUX/Buttons LEDs in Standby**: Off - Low - High - Blinking
- Temperature Check**: 7H
- Thermal Configuration**:
 - Release 7H after **single flash**
 ► **Set Current Temperature**
 Click n times for n °C
 - Release 7H after **double flash**
 ► **Set Stepdown Temperature Limit**
 Click n times for n + 30°C
- Set Beacon Frequency**: 1 blink = 1 second pause
- Voltage Calibration**: 7H
- SOS Mode**: 2C
- Beacon Mode**: 2C

Simple UI

Advanced UI